

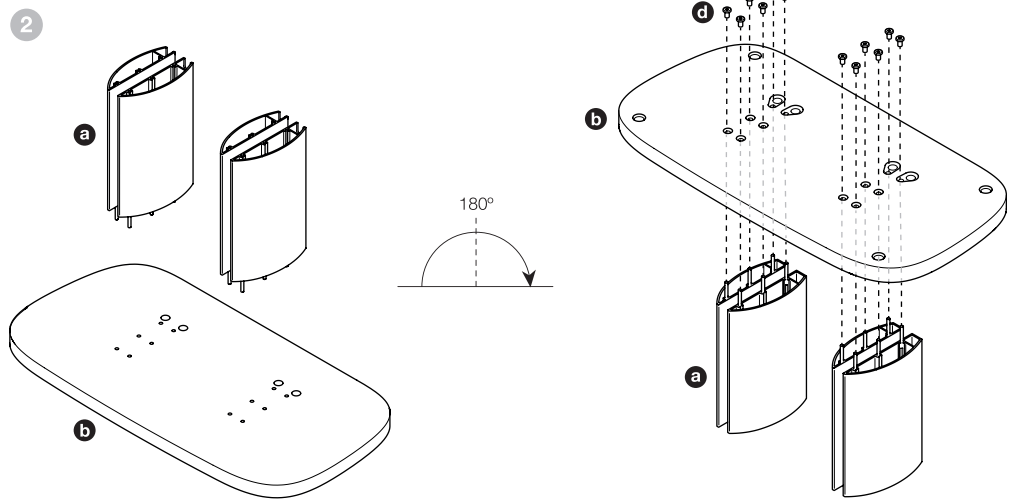
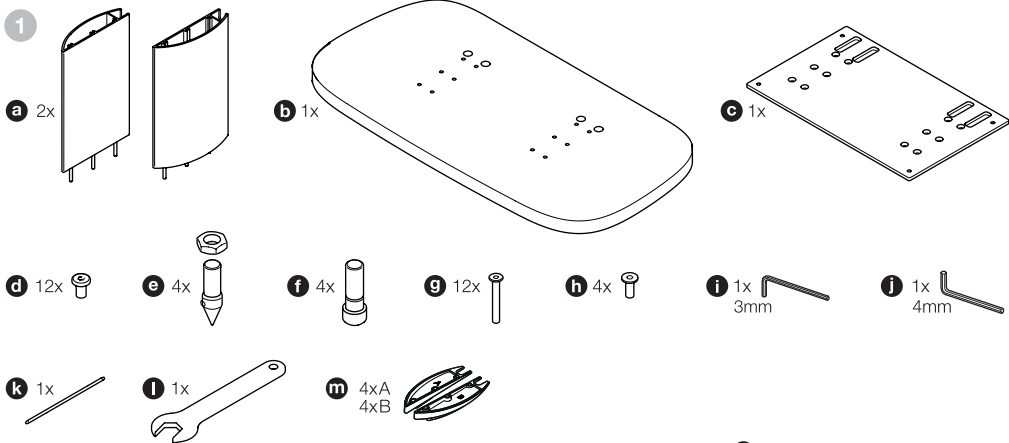
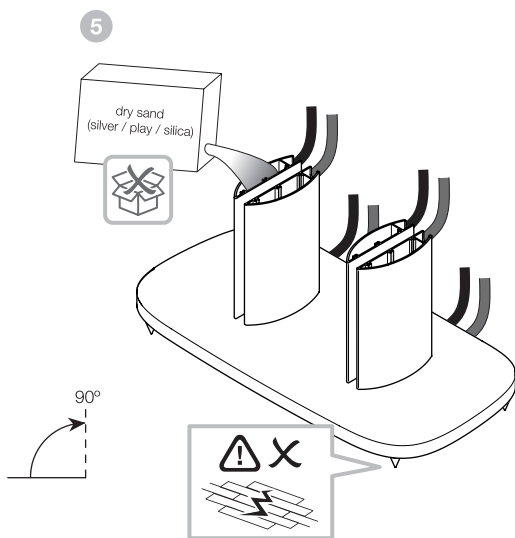
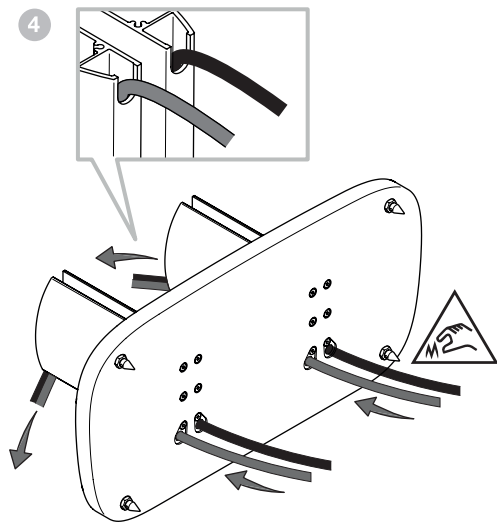
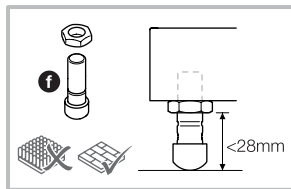
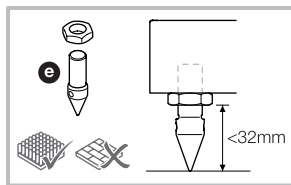




FS-HTM D4

Assembly Instructions

Bowers & Wilkins

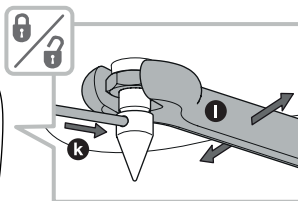

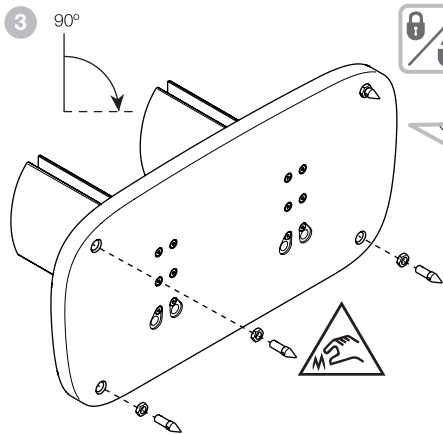

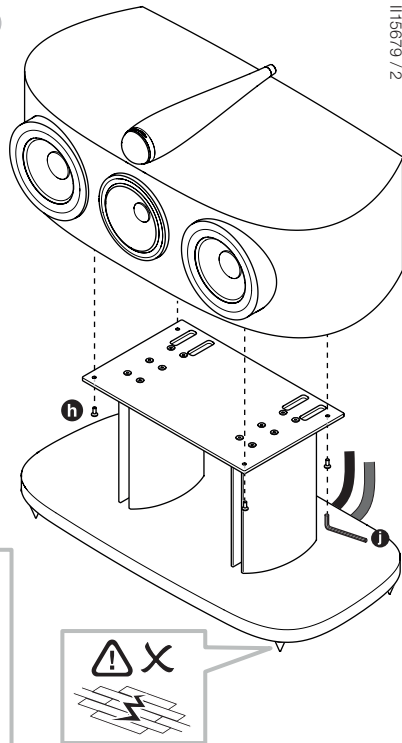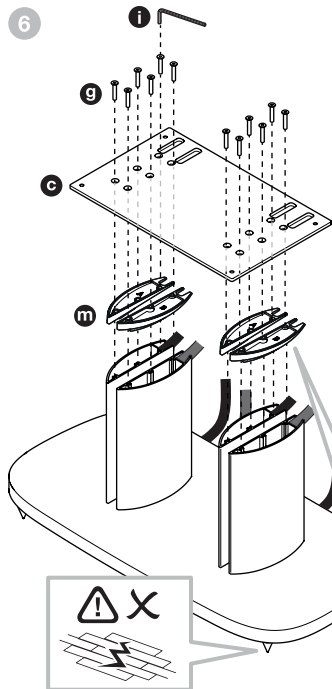

B&W Group Ltd
Dale Road
Worthing West Sussex
BN11 2BH England

EU Importer:
Bowers & Wilkins
Beermidstraat 11
5653 MA Eindhoven
The Netherlands

