

MAGICO M3 USER'S GUIDE



A MESSAGE FROM ALON WOLF:

THANK YOU FOR PURCHASING THE MAGICO M3 LOUDSPEAKERS.

THE M3 INCORPORATES ALL WE HAVE LEARNED IN THE PAST 23 YEARS ABOUT LOUDSPEAKER DESIGN AND MANUFACTURING. LIKE ALL MAGICO LOUDSPEAKERS, THE M3 IS A PRECISION INSTRUMENT FOR MUSIC REPRODUCTION. PROPERLY SET UP AND MAINTAINED, IT WILL PROVIDE YOU WITH A GREAT MUSICAL EXPERIENCE FOR MANY YEARS.

BEFORE UNPACKING AND PLAYING YOUR SPEAKERS, PLEASE READ THE FOLLOWING MANUAL FULLY. IT WILL PROVIDE YOU WITH DIRECTIONS FOR PROPERLY SETTING UP, POSITIONING, CONNECTING, AND CARING FOR YOUR SPEAKERS. FOLLOWING THESE INSTRUCTIONS WILL ENSURE A SMOOTH INSTALLATION AND OPTIMUM SPEAKER PERFORMANCE.

IF YOU HAVE ANY QUESTIONS, PLEASE CONTACT YOUR AUTHORIZED MAGICO DEALER. MAGICO MAINTAINS A NETWORK OF DEDICATED DISTRIBUTORS WHO WILL BE ABLE TO HELP YOU, SHOULD YOU HAVE ANY PROBLEMS YOUR DEALER CANNOT RESOLVE. FOR THE LATEST INFORMATION ON ALL MAGICO PRODUCTS, PLEASE VISIT OUR WEBSITE, WWW.MAGICO.NET.

I WISH YOU MANY HOURS OF LISTENING PLEASURE.

KINDEST REGARDS,

A handwritten signature in dark ink, appearing to read 'Alon Wolf', is positioned above the printed name.

ALON WOLF, CEO
MAGICO, LLC

WARNING



THE M3 USES A TWEETER EQUIPPED WITH A DIAMOND COATED BERYLLIUM DOME, ALLOWING A FREQUENCY RANGE EXTENDING BEYOND 40kHz. IN ITS SOLID FORM, BERYLLIUM IS HARMLESS. HOWEVER, DUE TO ITS NATURE, CERTAIN SPECIAL PRECAUTIONS SHOULD BE OBSERVED TO AVOID EXPOSURE TO UNNECESSARY RISK, SUCH AS:

- UNDER NO CIRCUMSTANCES SHOULD THE BERYLLIUM DOME BE SUBJECTED TO ANY FORM OF ABRASIVE ACTION.
- IN THE UNLIKELY CASE OF DAMAGE TO THE DOME, OF ANY FORM, A WIDE PIECE OF ADHESIVE TAPE SHOULD BE IMMEDIATELY USED TO SEAL THE WHOLE FRONT SURFACE OF THE TWEETER. YOU SHOULD THEN INFORM THE DEALER WHO YOU PURCHASED THE PRODUCT FROM, SO THAT THE TWEETER CAN BE REMOVED AND REPLACED BY A PROFESSIONAL.
- IF THE DOME IS DAMAGED IN ANY WAY, CAUSING LOOSE PARTICLES OF BERYLLIUM, THESE SHOULD BE CAREFULLY COLLECTED WITH THE USE OF ADHESIVE TAPE, PLACED IN A SEALABLE BAG, AND RETURNED ALONG WITH THE TWEETER.

MAGICO M3 USER'S GUIDE

UNPACKING INSTRUCTIONS


1. THE FOLLOWING TOOLS ARE REQUIRED: A PRY BAR, 3/8" DRIVE RATCHET OR DRIVE ADAPTER AND CORDLESS DRILL, 9/16" OR 14MM SOCKET, 3/4" OR 19MM SOCKET, 1/4" HEX WRENCH, 3/8" HEX WRENCH, 5/16" HEX WRENCH, AND 3 PEOPLE.
2. USING A FLAT HEAD SCREWDRIVER OR PRY BAR, REMOVE THE 6 CLAMPS FROM THE FRONT OF THE CRATE AND REMOVE THE CRATE DOOR.




3. REMOVE THE DOOR. THE INSIDE OF THE DOOR HAS A TAB, PLACE THIS TAB DOWN AND INSIDE THE KEYWAY SLOT THAT IS IN THE CRATE BASE.
4. THE DOOR NOW BECOMES A RAMP THAT IS LOCKED IN PLACE WITH THE CRATE BASE.




5. USING A 3/8" DRIVE RATCHET OR CORDLESS DRILL WITH A 9/16" SOCKET BIT REMOVE THE 6 BOLTS FROM AROUND THE BOTTOM OF THE CRATE.
6. **WITH TWO PEOPLE**, LIFT AND REMOVE THE CRATE BOX TOP AND REMOVE FOAM FROM DOOR RAMP.

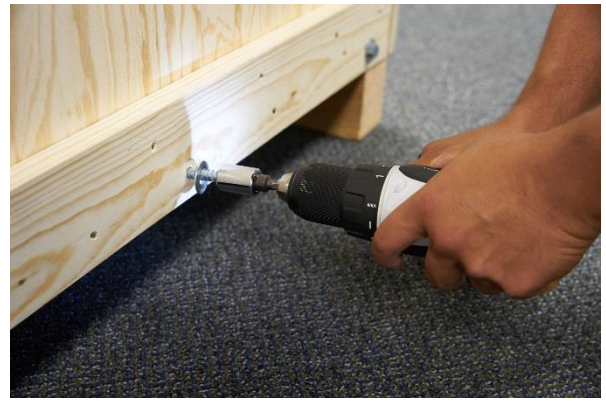

7. YOU WILL NOTICE THAT CASTER WHEELS ARE SECURED TO THE CRATE BASE WITH A "U-BRACKET" OR STRAP CLAMP, A FASTENER, A CHOCK BLOCK AND A ZIP TIE.

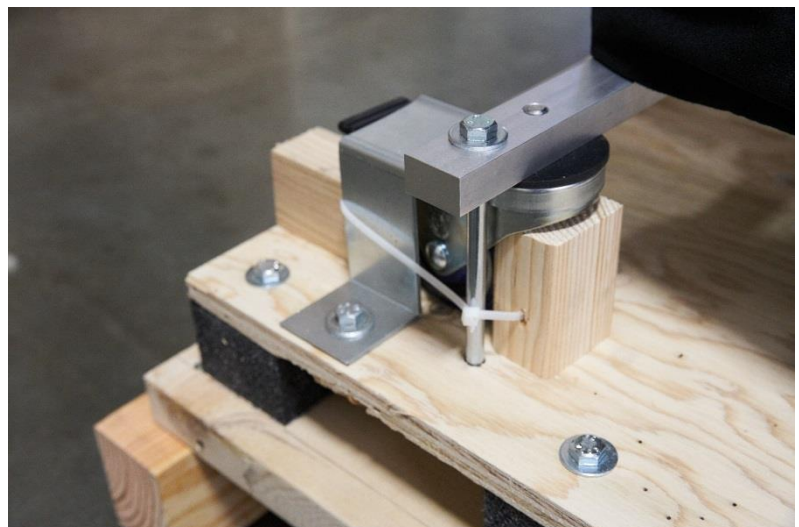

8. REMOVE THE ZIP TIES SECURING THE CHOCK BLOCKS TO THE CASTER WHEELS. USE WIRE CUTTERS, SCISSORS, OR A BLADE TO CAREFULLY REMOVE THESE TIES.

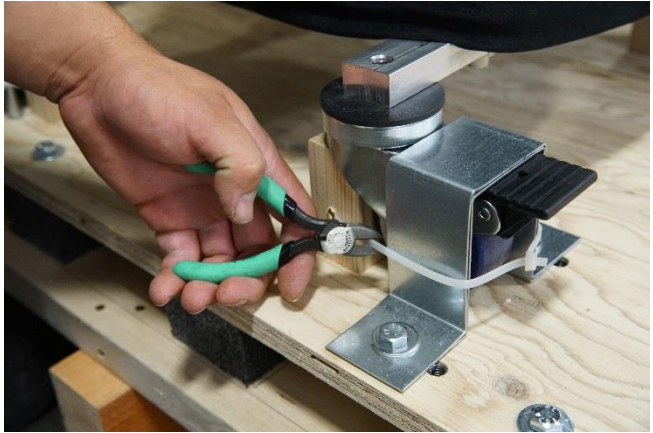


9. REMOVE THE FASTENERS THAT ARE SECURING THE CASTER OUTRIGGERS TO THE CRATE BASE USING A 9/16" SOCKET AND RATCHET.



10. REMOVE CHOCK BLOCKS FROM UNDERNEATH CASTERS.

11. REMOVE THE BOLTS FASTENING THE STRAP CLAMPS OR "U-BRACKETS" ON ALL FOUR CASTER WHEELS USING A 9/16" SOCKET AND RATCHET.

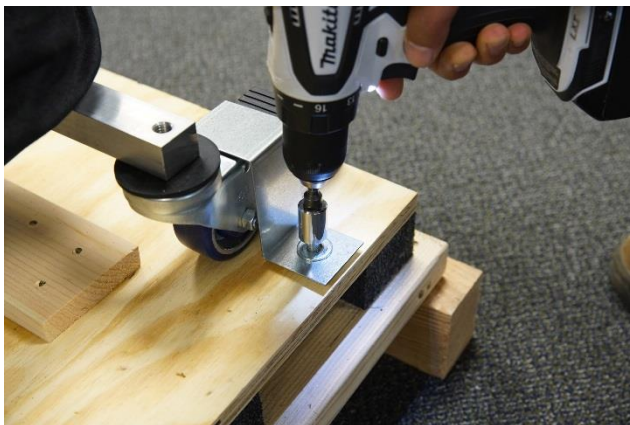

12. UNLOCK THE CASTER WHEEL BRAKES, PUSH THE SPEAKER 3 INCHES TOWARDS THE RAMP, **SET BRAKES TO “ON” POSITION**, NOW SLIGHTLY TILT THE SPEAKERS TOWARDS THE REAR SO THAT THE WEIGHT ON THE FRONT WHEELS IS ALEVIATED, **UNLOCK BRAKES AND PIVOT THE FRONT CASTER WHEELS TO FACE THE BACKSIDE/REAR OF THE SPEAKER AND LOCK THE CASTER WHEEL BRAKES.**





13. **WITH TWO PEOPLE, ONE PERSON ON EITHER SIDE OF THE M3**, TRANSPORT SPEAKER DOWN THE RAMP AND OFF OF THE BASE.
14. POSITION SPEAKERS IN DESIRED LOCATION.




15. **SET ALL BRAKES TO “ON” POSITION AND REMOVE THE VELVET BAG.**

MPOD OWNERS

16. USING THE HELP OF 2 OR MORE PEOPLE, TILT SPEAKER BACKWARD, UNINSTALL FRONT CASTER WHEELS AND INSTALL M-PODS BY CAREFULLY THREADING THEM INTO POSITION. ALTERNATIVELY, IF YOU DO NOT HAVE THE M-POD PACKAGE GO TO STEP 22.

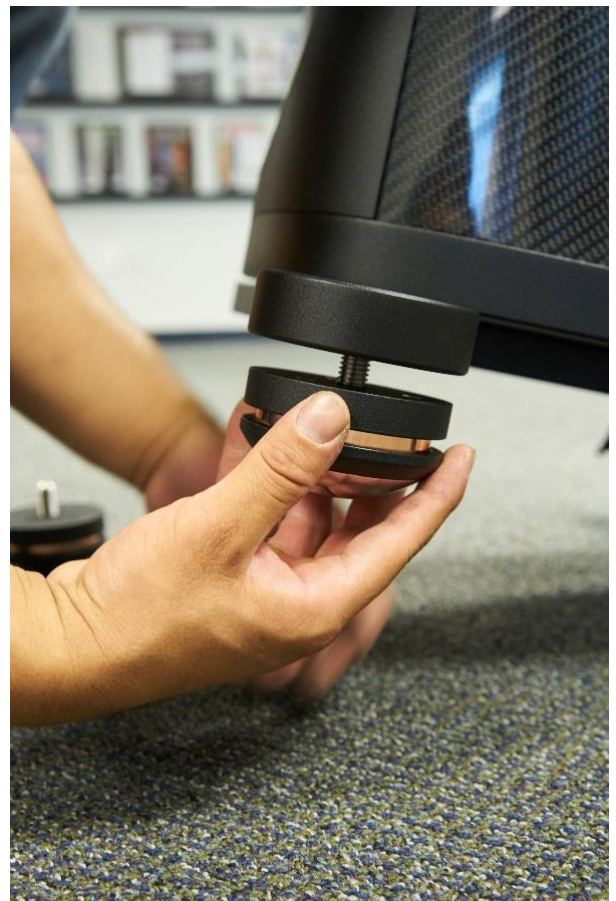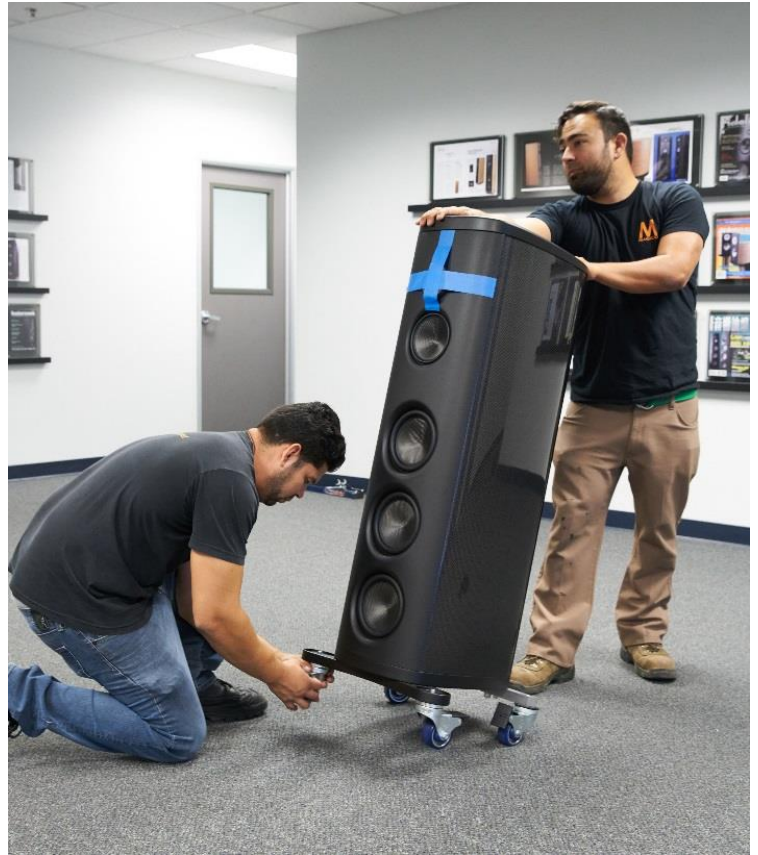

17. TILT SPEAKER FORWARD, UNTHREAD AND REMOVE THE SHIPPING BARS FROM THE BOTTOM OF THE M3. YOU WILL NEED A 3/8" HEX BIT TO REMOVE THE LARGE FASTENER ON THE SHIPPING BAR. YOU WILL NEED TO USE A 5/16" HEX BIT TO REMOVE THE SMALLER SHIPPING BAR FASTENER. INSTALL THE M-POD BY CAREFULLY THREADING IT IN TO POSITION. M-PODS WITH A SHORT STUD MUST ONLY BE INSTALLED IN THE REAR SECTION OF THE STAND. M-PODS WITH LONGER STUDS ARE TO BE INSTALLED IN THE FRONT TWO STAND OUTRIGGERS.

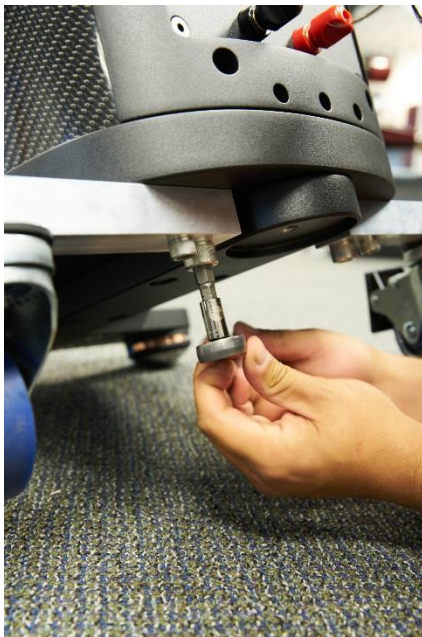


18. USING A 1/4" HEX WRENCH, ADJUST AND LEVEL THE M-POD BY TURNING THE EXPOSED STUD.



19. WHEN THE IDEAL POSITION HAS BEEN ACQUIRED, CAREFULLY THREAD ON THE M-POD TOP.





20. REMOVE THE ANCHOR PIN FROM THE M-PODS. **THIS PIN MUST BE REPLACED BEFORE ANY ATTEMPTS TO ADJUST POSITIONING OF THE SPEAKER.**

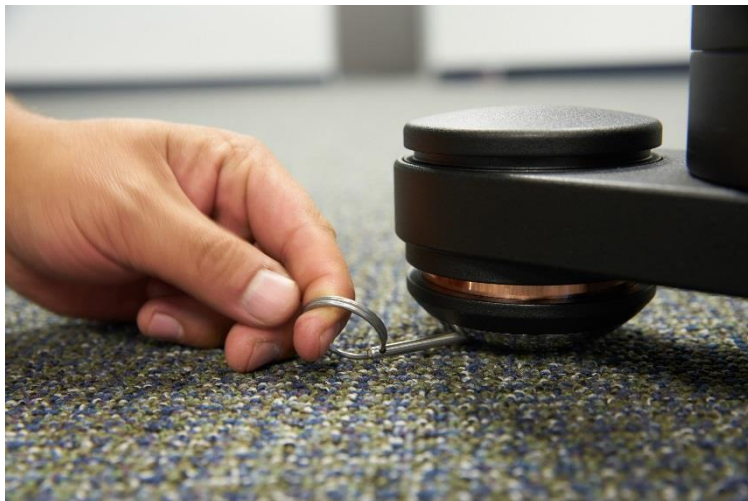

21. REMOVE THE TWEETER PROTECTOR AND SECURITY TAPE AND PROCEED TO STEP 35.


M3 SPIKE OWNERS

22. SPIKE OWNERS HAVE A CHOICE OF CHOOSING WHICH TYPE OF FOOT TO USE. THE BALL END FOOT IS FOR USE ON HARD FLOORS WHILE THE SPIKE IS FOR USE ON A CARPETED SURFACE.
23. TO ASSEMBLE THE M3 SPIKE, CHOOSE THE FOOT THAT WILL WORK BEST WITH THE TYPE OF FLOORING YOU HAVE. THREAD THE HEX JAM NUT ON TO THE FOOT OF YOUR CHOICE AND THREAD IT ALL THE WAY TO THE LAST THREAD (WHERE THE TAPER BEGINS).
24. THREAD THE FOOT AND JAM NUT ASSEMBLY IN TO THE M3 SPIKE BODY (BLACK AND COPPER UNIT). YOU NOW HAVE A FINISHED M3 SPIKE READY FOR INSTALL.

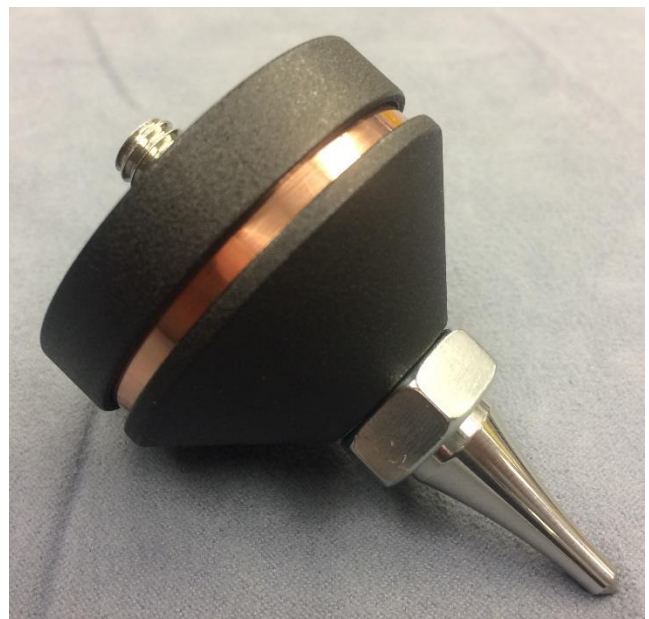
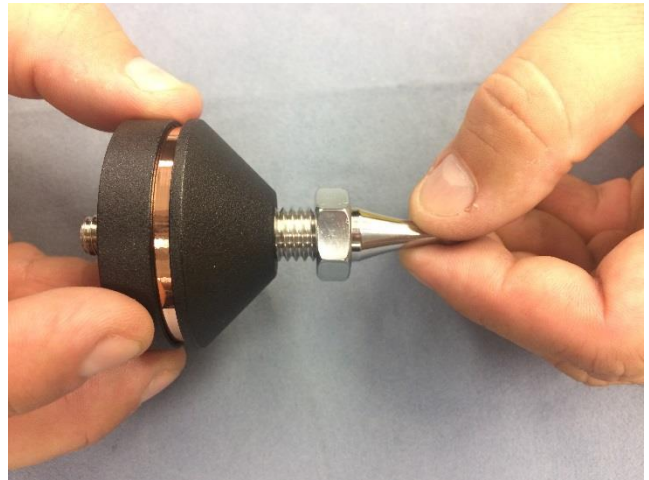


25. USING THE HELP OF 3 OR MORE PEOPLE, POSITION ALL FOUR CASTER WHEELS SO THAT THEY ARE FACING INWARD. THIS WILL ALLOW FOR THE SPEAKER TO TILT WITH EASE.

26. TILT SPEAKER BACKWARD, UNINSTALL FRONT SHIPPING BARS BY REMOVING THE (2) LARGE AND (2) MEDIUM SIZE FASTENERS FROM THE SHIPPING BARS. USE A $\frac{3}{8}$ " HEX BIT TO REMOVE THE LARGE FASTENERS, USE A $\frac{5}{16}$ " BIT TO REMOVE THE MEDIUM FASTENERS. HOLD THE CASTER WHEEL WHEN REMOVING THE SHIPPING BAR, THIS WILL ALLEVIATE ANY PRESSURE ON THE FASTENER AND WILL MAKE THE REMOVAL OF THE FASTENER MUCH EASIER.

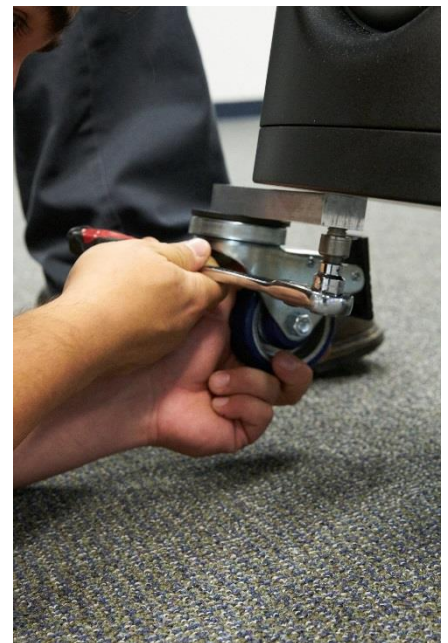

27. WITH THE M3 STILL BEING TIPPED BACK AND THE SHIPPING BARS REMOVED, CAREFULLY THREAD IN THE M3 SPIKE ASSEMBLY IN TO BOTH LOCATIONS ON THE BASEPLATE.
28. GENTLY LOWER THE CABINET DOWN ON TO ITS SPIKES, HAVE 2 PEOPLE HOLD THE SPEAKER FOR STABILITY.

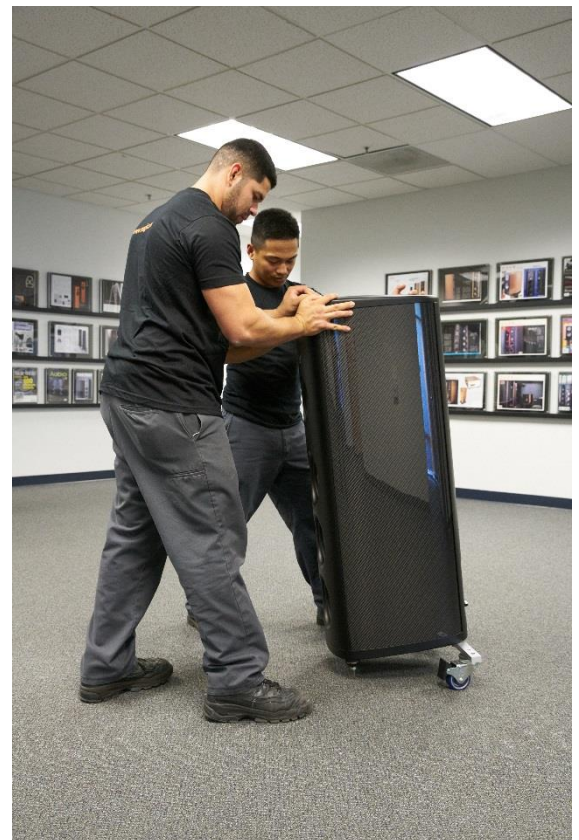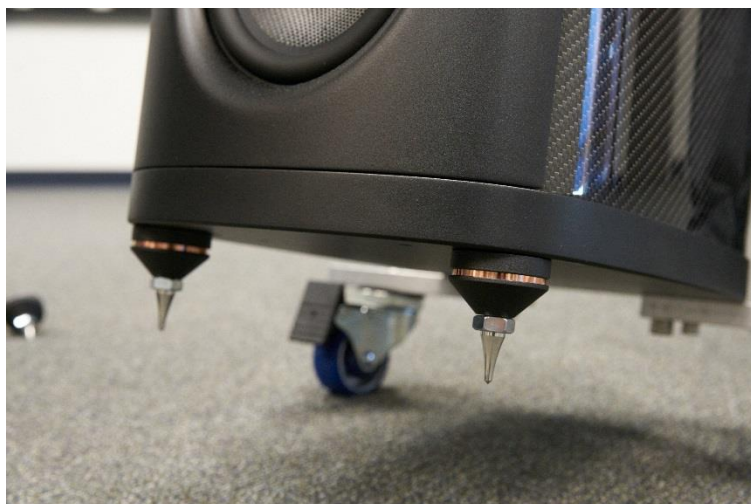

29. HAVE TWO PEOPLE TIP THE M3 FORWARDS ON TO THE SPIKES, HAVE BOTH PEOPLE HOLDING AND STABILIZING THE M3.
30. REMOVE THE REAR SHIPPING BARS. UNFASTEN (2) LARGE AND (2) MEDIUM FASTENERS THAT ARE SECURING THE SHIPPING BARS WITH A 3/8" HEX BIT (FOR THE LARGE FASTENER) AND A 5/16" HEX BIT (FOR THE MEDIUM SIZE FASTENER). HOLD THE CASTER WHEELS WHEN REMOVING THE SHIPPING BAR TO ALEVIATE PRESSURE ON THE FASTENERS.
31. CAREFULLY THREAD IN THE M3 FOOT ASSEMBLY.
32. SLOWLY LOWER THE CABINET ON TO ALL FOUR SPIKES. ADJUST THE HEIGHT OF EACH SPIKE TO LEVEL THE M3. THREAD THE SPIKE **IN** TO LOWER HEIGHT AND THREAD SPIKES **OUT** TO RAISE HEIGHT. WHEN THE SPEAKER IS LEVEL, LOCK THE SPIKE IN PLACE BY FASTENING THE LOCK NUT AGAINST THE FOOT ASSEMBLY WITH A 19MM OR 3/4" WRENCH.
33. CAREFULLY LOWER THE M3 DOWN ON ALL FOUR SPIKES.
34. REMOVE THE TWEETER SECURITY TAPE.



35. A TORQUE WRENCH IS INCLUDED IN EACH ACCESSORY KIT TO CHECK TORQUE ON EACH OF THE 8 FLAT FASTENERS ON THE BACK OF THE M3.

36. SET THE TORQUE WRENCH FOR 115 INCH POUNDS.

- LOOSEN THE LOCK AT THE BOTTOM OF THE TORQUE WRENCH.
- TURN THE HANDLE SO THE “5” LINES UP WITH THE “110” ON THE INCH-POUND SCALE.
- TIGHTEN THE LOCK AT THE BOTTOM OF THE TORQUE WRENCH.



37. ATTACH THE BIT AND DRIVE TO THE TORQUE WRENCH DRIVE SHAFT.
38. CHECK THE TORQUE OF EACH OF THE 8 FLAT FASTENERS ON THE BACK OF THE M3. THE WRENCH WILL CLICK TO LET THE USER KNOW THAT THE TORQUE SETTING OF THE FASTENERS IS UP TO DATE. **NOW SET THE WRENCH TO ITS LOWEST SETTING TO PRESERVE ITS ACCURACY DURING STORAGE.**

- LOOSEN THE LOCK AT THE BOTTOM OF THE TORQUE WRENCH.
- TURN THE HANDLE SO THE “0” LINES UP WITH THE “20” MARK ON THE INCH-POUND SCALE.
- TIGHTEN THE LOCK AT THE BOTTOM OF THE TORQUE WRENCH.



SPEAKER PLACEMENT AND POSITIONING

THE MAGICO M3 LOUDSPEAKERS ARE PRECISION INSTRUMENTS FOR MUSIC REPRODUCTION. AS SUCH, PROPER CARE AND ATTENTION TO DETAIL WHEN SETTING UP THESE SPEAKERS WILL YIELD THE MAXIMUM PERFORMANCE, REGARDLESS OF THE PARTICULAR ROOM. FOLLOWING THESE SET-UP GUIDELINES WILL ENSURE THE SPEAKERS ARE PROPERLY POSITIONED TO DELIVER THE OPTIMUM LISTENING EXPERIENCE. ALL THAT IS REQUIRED IS A TAPE MEASURE, A PEN, A CALCULATOR, A BALL OF STRING, A COUPLE OF DEMO CDS, AND SOME PATIENCE.

PLACEMENT—M3s IN RELATION TO BACK AND SIDE WALLS

BEFORE YOU BEGIN: LOOK FOR OBVIOUS IMPEDIMENTS INCLUDING ANYTHING THAT COULD IMPEDE OR DIMINISH THE SOUND—E.G., OTHER SPEAKERS, AMPLIFIERS, EQUIPMENT RACKS, ANYTHING ON THE WALL THAT COULD CAUSE A REFLECTION, A SEVERE MISMATCH IN QUALITY AMONG INDIVIDUAL COMPONENTS, AND UNNECESSARY OR POORLY RUN SPEAKER/INTERCONNECT CABLES.

BASS—DISTANCE FROM REAR WALL

THE INITIAL PLACEMENT SHOULD BE APPROXIMATELY 20 INCHES (1/2 M) FROM THE BACK OF THE LOUDSPEAKER TO THE BACK WALL. SINCE WE HAVE SHORT AUDITORY MEMORY, THE SELECTED DEMO MUSIC CUT SHOULD BE BRIEF—30 SECONDS – 1 MINUTE MAX. IT SHOULD BE A WELL RECORDED JAZZ CUT WITH GOOD BASS GUITAR OR PERCUSSION. WHAT WE ARE LISTENING FOR AT THIS TIME IS THE DEFINITION OF THE BASS AND THE RIGHT SENSE OF PROPORTION.

NEXT, MOVE THE SPEAKER 6 – 8 INCHES (15 – 20 CM) FORWARD AND REPEAT THE LISTENING PROCESS. REPEAT THIS PROCESS, MOVING THE LOUDSPEAKER FORWARD IN 6 – 8 INCH (15-20 CM) INCREMENTS. WHEN YOU REACH THE POINT FROM WHICH MOVING THE SPEAKER FORWARD SOUNDS WORSE THAN THE PREVIOUS LISTENING POINT, MOVE THE LOUDSPEAKER BACK TO THIS POSITION AND MARK THIS DISTANCE FROM THE REAR WALL.

MIDRANGE—PLACEMENT IN RELATION TO SIDE WALLS FOR LATERAL PLACEMENT

BEGIN BY DIVIDING THE ROOM WIDTH BY 14. INITIAL PLACEMENT OF THE LOUDSPEAKERS WILL BE AT 3 AND 11. THE DISTANCE FROM THE LOUDSPEAKER TO THE EARS HAS TO BE PRECISELY EQUAL. THIS MEASUREMENT IS CRITICAL. THE MUSIC FOR THIS PROCESS SHOULD BE A FEMALE VOICE AND PIANO. WE ARE LISTENING FOR THE IMAGE OF HER VOICE TO BE FOCUSED. THE RULE FOR THE TOE-IN IS TO PICK A POINT APPROXIMATELY 1 – 2 FEET (. M) BEHIND THE LISTENER'S HEAD. TOE THE

LOUDSPEAKERS IN TO INTERSECT AT THAT POINT. IF THE SOUND IS TOO BRIGHT, TOE THE SPEAKERS OUT A LITTLE MORE. IF THE SOUND IS TOO DULL, TOE THE SPEAKERS IN A LITTLE MORE. REPEAT THE ABOVE PROCESS WITH THE LOUDSPEAKERS AT THE 4 AND 10 POSITION. THEN REPEAT, ONCE AGAIN WITH THE SPEAKERS AT THE 5 AND 9 POSITION.

SUMMARY

ONCE THE INITIAL PROCESS HAS BEEN COMPLETED, RETURN TO THE BASS SET-UP TO ENSURE THAT THE LOUDSPEAKERS ARE THE PROPER DISTANCE FROM THE BACK WALL. WHEN THE PROCESS HAS BEEN COMPLETED, MARK THE SPEAKER LOCATION WITH TAPE SO THAT THE SPEAKERS CAN BE RETURNED THERE FOR FURTHER LISTENING.

POSITIONING—M3s IN RELATION TO THE LISTENER

- THE SPEAKERS AND THE LISTENER SHOULD FORM AN ISOSCELES TRIANGLE.
 - THE LISTENER SHOULD BE EXACTLY EQUIDISTANT BETWEEN THE TWO LOUDSPEAKERS.
- THE BEST WAY TO DETERMINE THIS IS WITH A PIECE OF STRING. PICK A FIXED SPOT AT THE LISTENING POSITION. RUN THE STRING FROM THIS SPOT TO THE FRONT OF THE TWEETER OF THE LEFT SPEAKER. REPEAT THE PROCESS FOR THE RIGHT SPEAKER. IT IS CRITICALLY IMPORTANT TO KEEP THIS DISTANCE PRECISELY THE SAME.

CONNECTIONS

CONNECTIONS SHOULD BE MADE WITH ALL ELECTRONIC EQUIPMENT (AMPLIFIERS, PREAMPLIFIERS) TURNED OFF. THERE ARE TWO TERMINALS AT THE BACK OF THE SPEAKER. THE TERMINALS ARE INSULATED TO ACCEPT A VARIETY OF CABLE TERMINATIONS FOR MOST APPLICATIONS AND TO PREVENT ANY LIKELIHOOD OF ELECTRICAL SHOCK, EVEN WHEN THE SPEAKERS ARE USED WITH THE HIGHEST POWERED AMPLIFIERS. DO NOT USE TOOLS TO TIGHTEN THE BINDING POSTS.

BREAK-IN

A LOUDSPEAKER IS A MECHANICAL DEVICE AND AS SUCH REQUIRES AN EXTENDED INITIAL PERIOD OF NORMAL USE DURING WHICH A NOTICEABLE IMPROVEMENT IN SOUND QUALITY WILL OCCUR. DO NOT ATTEMPT TO ACCELERATE THE BREAK-IN PROCESS BY PLAYING SINE WAVES, TONE SWEEPS, BREAK-IN CDS OF ANY SORT, OR OTHER GENERATED SIGNALS.

CARE:

FOR ALUMINUM PANELS USE A LINT-FREE SOFT CLOTH (PROVIDED IN ACCESSORY KIT). FOR PAINTED SURFACES, USE A PRODUCT SUCH AS MEGUIAR'S PROFESSIONAL FINALINSPECTION 34. DO NOT USE CLEANERS THAT CONTAIN AMMONIA, STRONG SOLVENTS, OR ABRASIVE MATERIALS. USE OF THESE CLEANERS CAN DEGRADE, SCRATCH, OR DESTROY THE FINISH.

SPECIFICATIONS

DESCRIPTION: 3-WAY (5 DRIVER) SEALED BOX ENCLOSURE

DRIVER COMPLEMENT:

1" MBD28 Diamond Coated Beryllium Dome Tweeter

6" MAG6004RTC Graphene Nano-Tec Cone

7" MAG7012RTC Graphene Nano-Tec Bass (x3)

SENSITIVITY: 91dB

IMPEDANCE: 4 Ohms

FREQUENCY RESPONSE: 24 Hz – 50 kHz

RECOMMENDED POWER: 20 - 500 WATTS

DIMENSIONS: 48" H x 19" D x 13" W (120cm x 49cm x 34cm)

WEIGHT: *approx.* 320 lbs. (145 kg.)

LIMITED WARRANTY

DEAR MAGICO PURCHASER,

THIS PRODUCT HAS BEEN DESIGNED AND MANUFACTURED TO THE HIGHEST QUALITY STANDARDS. HOWEVER, IF SOMETHING DOES GO WRONG WITH THIS PRODUCT, MAGICO, LLC AND ITS NATIONAL DISTRIBUTORS WARRANT THE REPLACEMENT OF DEFECTIVE PARTS INCLUDING LABOR (EXCLUSIONS MAY APPLY) IN ANY COUNTRY SERVED BY AN OFFICIAL MAGICO, LLC DISTRIBUTOR. THIS LIMITED WARRANTY IS VALID FOR A PERIOD OF 5 YEARS FROM THE DATE OF PURCHASE.

TERMS AND CONDITIONS

1. THE WARRANTY IS LIMITED TO THE REPAIR OF THE EQUIPMENT. IN THE EVENT THAT THIS LOUDSPEAKER REQUIRES SERVICE, THE CUSTOMER MUST FIRST OBTAIN A RETURN AUTHORIZATION FROM MAGICO OR ITS AUTHORIZED DISTRIBUTOR. THE CUSTOMER IS RESPONSIBLE FOR RETURNING THE LOUDSPEAKER TO MAGICO OR ITS AUTHORIZED DISTRIBUTOR. IN THE EVENT THAT THE REPAIR IS DETERMINED TO BE UNDER WARRANTY, MAGICO WILL RETURN THE LOUDSPEAKER TO THE CUSTOMER AT NO CHARGE. EXCEPT AS INDICATED, NEITHER TRANSPORTATION, SHIPPING, NOR ANY OTHER COSTS, NOR ANY RISK FOR REMOVAL, TRANSPORTATION AND INSTALLATION OF PRODUCTS IS COVERED BY THIS WARRANTY.

2. WITH THE EXCEPTION EXPLAINED BELOW, THIS WARRANTY IS ONLY VALID FOR THE ORIGINAL OWNER. IT IS NOT TRANSFERABLE. IT IS VALID ONLY WHEN PURCHASED FROM AN AUTHORIZED MAGICO DEALER. A VALID RECEIPT SHOWING THE PURCHASER'S NAME, DATE OF PURCHASE, AND DEALER INFORMATION MUST BE SUBMITTED WITH ALL WARRANTY CLAIMS.

3. IN THE EVENT THAT THIS LOUDSPEAKER IS PURCHASED AS A USED OR TRADE-IN LOUDSPEAKER FROM AN AUTHORIZED MAGICO DEALER OR DISTRIBUTOR, THE SECOND OWNER SHALL RECEIVE THE BALANCE OF THE ORIGINAL WARRANTY BASED UPON THE ORIGINAL DATE OF PURCHASE. VALID RECEIPTS SHOWING THE PURCHASER'S NAME, DATE OF PURCHASE, AND DEALER INFORMATION FOR THE CURRENT OWNER AND THE ORIGINAL PURCHASE MUST BE SUBMITTED WITH ALL WARRANTY CLAIMS.

4. THIS WARRANTY WILL NOT BE APPLICABLE IN CASES OTHER THAN DEFECTS IN MATERIALS AND/OR WORKMANSHIP AT THE TIME OF PURCHASE AND WILL NOT BE APPLICABLE FOR DAMAGES CAUSED BY INCORRECT INSTALLATION, CONNECTION OR PACKING, FOR DAMAGES CAUSED BY ANY USE OTHER THAN CORRECT USE DESCRIBED IN THE USER MANUAL, NEGLIGENCE, MODIFICATIONS, OR USE OF PARTS THAT ARE NOT MADE OR AUTHORIZED BY MAGICO, LLC, FOR DAMAGES CAUSED BY FAULTY OR UNSUITABLE ANCILLARY EQUIPMENT, FOR DAMAGES CAUSED BY ACCIDENTS, LIGHTNING, WATER, FIRE HEAT, EXTREME WEATHER CONDITION, WAR, PUBLIC DISTURBANCES OR ANY OTHER CAUSE BEYOND THE REASONABLE CONTROL OF MAGICO, LLC AND ITS APPOINTED DISTRIBUTORS, FOR PRODUCTS WHOSE SERIAL NUMBER HAS BEEN ALTERED, DELETED, REMOVED OR MADE ILLEGIBLE, IF REPAIRS OR MODIFICATIONS HAVE BEEN EXECUTED BY AN UNAUTHORIZED PERSON.

5. THIS GUARANTEE COMPLEMENTS ANY NATIONAL/REGIONAL LAW OBLIGATIONS OF DEALERS OR NATIONAL DISTRIBUTORS AND DOES NOT AFFECT YOUR STATUTORY RIGHTS AS A CUSTOMER.

6. UNAUTHORIZED DISMANTLING OF THIS PRODUCT WILL RENDER THIS WARRANTY VOID.

7. MAGICO, LLC STRIVES TO MANUFACTURE THE VERY FINEST POSSIBLE EQUIPMENT, AND THEREFORE RESERVES THE RIGHT TO MAKE CHANGES OR IMPROVEMENTS WITHOUT NOTICE.

SERIAL NUMBERS

PLEASE TAKE THE TIME TO RECORD YOUR SPEAKERS' SERIAL NUMBERS BELOW.

DISCLAIMER

MAGICO, LLC CREATED THIS MANUAL AND THE CONTAINED INFORMATION AVAILABLE ON AN "AS IS" BASIS. ALL WARRANTIES AND REPRESENTATIONS OF ANY KIND WITH REGARD TO SAID INFORMATION IS DISCLAIMED, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR USE. UNDER NO CIRCUMSTANCES WILL MAGICO, LLC, OR ANY OF ITS OFFICERS OR EMPLOYEES BE LIABLE FOR ANY CONSEQUENTIAL, INCIDENTAL, SPECIAL OR EXEMPLARY DAMAGES EVEN IF APPRISED OF THE LIKELIHOOD OF SUCH DAMAGES OCCURRING. MAGICO, LLC DOES NOT WARRANT THE INFORMATION AGAINST DEFICIENCIES OF ANY KIND.

MAGICO, LLC
3170 CORPORATE PLACE
HAYWARD, CA 94545
USA
PHONE: +1.510.649.9700
FAX: +1.510.323.4774
EMAIL: INFO@MAGICO.NET
BUSINESS HOURS: 8AM - 4PM PACIFIC TIME



© 2016 MAGICO, LLC